

Quickstart Guide for PC DNC Plus

Login as Administrator

Important: On *Windows 7* computers, turn off USER ACCOUNT CONTROL. To turn off User Account Control, go to Control Panel/System & Security/Action Center/Change User Account Control Settings. Move bar all the way to bottom, Click Save. You may be prompted to reboot your computer.

Important: On <u>Windows 8</u> computers, turn off USER ACCOUNT CONTROL. To turn off User Account Control, go to Control Panel/System & Security/Action Center/Change User Account Control Settings. Move bar all the way to bottom, Click Save. You may be prompted to reboot your computer.

Important: Download software program from website (see link below). On *Windows 7 and Windows 8* computers, CLICK SAVE when downloading the file NOT RUN. Then find the downloaded executable, right click and choose RUN AS ADMINISTRATOR.

Windows 7 and Windows 8 require version 5.9 or later.

http://www.sub-soft.com/download/PC-DNC_Plus/setup_plus_5.9.0.exe

CLICK SAVE when downloading the file NOT RUN Find downloaded setup file, Setup_Plus 5.9.0.exe RIGHT CLICK and choose RUN AS ADMINISTRATOR

Click NEXT at Installshield Wizard Enter name and company name Click NEXT Confirm Destination Folder is C:\RYM\PC-DNC Plus Server Click NEXT

You may get a Windows warning on your screen that will indicate that PC DNC Plus is possibly installed incorrectly due to the change in default directly. Click the choice that states "The software was Installed Correctly."

Click FINISH

Important: On Windows 7 & 8 computers, it is very important to right click on the PC DNC Plus shortcut on the desktop before running it the first time and choose RUN AS ADMINISTRATOR. If RUN AS ADMINISTRATOR is not an option when right clicking on the PC DNC Plus shortcut, then you can skip this step.

> Suburban Machinery Software, Inc. 37777 Harlow Drive, Willoughby Ohio 44094 (440) 951-8974 subsoft@buckeyeweb.com



Open PC DNC Plus <mark>(for Windows 7 & 8 users, after right clicking on PC DNC Plus Desktop shortcut and choosing Run as Administrator)</mark>

To license your product go to About/Purchasing Info menu. Note 9-digit security number. Contact Suburban Machinery Software, Inc. with your number either by phone (440) 951-8974 or by email to suburbanmachinery@gmail.com You will receive your license by email with instructions on how to activate it.

See below for basic steps in setting up your machines.

NOTE: If you are moving your PC-DNC Plus Server software from one computer to another, you SHOULD have a backup of your machine settings from the old system. If that backup is available to your new computer, simply import them using the "Configure/Restore configurations" menu.



To configure machine parameters, choose CONFIGURE / DNC Windows.

| S Configure DNC windows | | | | |
|--|---|--|--|--|
| Machine list: Fanuc Yasnac Cincinnati Mitsubishi Test | Serial Ports Advanced I/O Commands I/O Directories File names Path to DNC output window CVRYM/PC-DNC plus Server COM: 6 6 5 COM: 6 6 8audrate: 115200 5 6 7 data bits 6 1 stop bits 3 2 3 8400 2 6 7 data bits 7 1 stop bits 1 • 9600 • 6 6 data bits 7 2 stop bits | | | |
| Add machine name | Handshshaking Transmit code End-01/Block code (E0B) Xon/Xoff ASCII even parity LF RTS/CTS ASCII odd parity CR Both ASCII no parity Custom: None EIA RS244-B Image: Control of the second | | | |
| Delete machine name Print this configuration | Protocol to use for file transfers: Standard serial I/O Create & send a copy of each file C Spool files directly from disk If port will not open retry continuously every minute(s) | | | |
| OK Apply Cancel | Control CNCs memory protect key switch with DTR signal Check CTS and DTR at the end of each file before resetting (required for Moxa) Halt and reset port after 120 minutes of inactivity (required for Moxa) | | | |

Click ADD MACHINE NAME and enter appropriate settings for your machine control. Always copy config from another machine so that the basic defaults are set properly, then modify the settings as needed for your specific machine using the information on the link below for CNC configurations. Repeat for additional machines.

In addition to the configuration settings you will have to assign the appropriate COM port for each machine. Check the Windows Device Manager/Ports for available COM Ports.



If you are using PC DNC Plus with an external Serial Device Server such as Quatech, Comtrol, Moxa, you need to select Configure/DNC Windows. Check "Handshake using device driver."

| 🖏 Configure DNC windows | | | | | |
|---|---|--|--|--|--|
| Machine list: | Serial Ports Advanced I/O Comma | ands I/O Directories File names | | | |
| Yasnac Cincinnati Mitsubishi Haas Simulator | When sending Leader: %LF Trailer: % Check handshake every 5 characters Skip lines that start with: | When receiving ✓ Ignore data before 1st EOB ✓ Ignore data after last EOB ✓ Ignore Fadal checksum ✓ Use auto code recognition Print file after RX: | | | |
| Add machine name Rename machine Delete machine name | Safety timeout 7 seconds Reset file on safety timeout Character delay: 0 Block delay: 0 ms Delay after transmission (seconds) Use CALL statements | No timeout on manual receive Expect program ID on line # Special mods Okuma Moog MHP EZTRAK AB 8200 | | | |
| Print this configuration | ✓ Skip M02/M30 in CALLed files □ Delete blank lines □ Send RTS string <18> every 2 sec. | Wiedemann Haas loop Mazak CMT RS491 Limit time delays to 1st block Sand Yop grups 12 soconde | | | |
| Apply Cancel | Force all output to upper case Handshake using device driver Verify port is open every 10 sec Send when: | Autopath/Vision file conversion Close /open port after each I/O Don't send File Not Found msg. | | | |

Enter directory paths for programs for each machine under the I/O Directories Tab.

Click APPLY.

If you need assistance configuring your machine, call us at 440-951-8974.



Installing Driver for Quatech boxes

Best practice is to get new current driver for your hardware when moving to a new computer. Visit <u>http://www.sub-soft.com/download/sds220.zip</u> and download the latest driver for your device and operating system. Unzip this file, then run the program QTEWizard.exe

When you are installing a box with multiple ports, it will run through a driver installation and then a port installation for as many ports as are on the box. See detailed instructions titled *Quatech Device Installation Instructions* found on our FAQ page

After the driver is installed, go to Device Manager to find which COM Port(s) the device was installed on. Switch to the Device by Connection view to see the COM port(s) associated with each device. If they do not match the same numbers and order as they were on the old computer, you will have to renumber them to match the software, or you can go into the software (Configure/DNC Windows—click on each machine and select new port number) and renumber the ports there to match what is in the device manager.

OPTIONAL: You can also renumber the ports to a standard pattern so that it is easier to manage the ports in the future. Say it is an 8-port Quatech, number the ports Com 11 - 18. If there are several 8 port devices, number them 11-18, 21-28, 31-38, etc. This way you always match the physical port number on the device easily with the port number assigned in the software and device manager.

Right click on each Com port, click Port Settings, Advanced, pick another COM port number. Click OK. You will have to go into Configure/DNC Windows and renumber the port for each machine to match the new configuration.

If wireless, remove network cable and reset device. Check link lights for connectivity. When in wireless mode the right/green LAN link light should go on once the device has network connectivity. If not wireless, skip this step.

Suburban Machinery Software, Inc. 37777 Harlow Drive, Willoughby Ohio 44094 (440) 951-8974 subsoft@buckeyeweb.com



Installing Driver for Comtrol Boxes

- Locate latest driver from Comtrol Website for your device and operating system. Go to
 <u>Http://comtrol.com/support</u> and select the "Drivers and downloads" do download and install
 the correct driver for you device.
- 2. Click Next
- 3. Confirm file location for installation, Click Next:
- 4. Click Install
- 5. Make sure "Launch Devicemaster Driver Installation" is checked. Click Finish.
- 6. Click Next
- 7. Select the bubble next to Install. Click Next
- 8. From the pulldown list, choose Devicemaster Serial Hub 16 port. Click Next.
- 9. Click Proceed
- 10. Click Close.

The driver will be installed for the number of ports that the device has and you should see a message indicating your device is ready to use flash in the lower right corner of your screen as each Com Port is installed. It will do this 16 times for a 16 port device.

- 11. Find the device in the Windows Device Manager under Multiport Serial Adapters.
- 12. Right Click on Device. Choose Properties
- 13. Go to Network Connection
- 14. Make sure "Network Connection Mode" is set to MAC Mode
- 15. Type in the last 6 digits of the Mac Address (found on bottom of unit). Make sure to include a space between each pair of digits as the first 6 digits show. Click OK

To install a second Comtrol device, do not rerun the msi file. Instead go to Start/All Programs/Comtrol/Device Installation Wizard and the follow steps. You will need to repeat Steps 11 – 15 for each additional device.

To renumber ports of Comtrol hub if they are not assigned the same order as original PC. Go to Windows Device Manager/Multiport Serial Adapters. Right Click on Comtrol Device/Properties/Ports Settings Tab. Click on first Com Port number. Click on Properties at bottom of that window. At bottom of window under Port Name / COM Name, choose port number you want to start with. Check the box next to Renumber all ports consecutively. MAKE SURE THERE ARE CONSECUTIVE PORTS AVAILABLE FOR THE NUMBER OF PORTS ON YOUR DEVICE. Click APPLY.

> Suburban Machinery Software, Inc. 37777 Harlow Drive, Willoughby Ohio 44094 (440) 951-8974 subsoft@buckeyeweb.com



Installing Driver for Moxa Boxes

Download and install Nport Driver Manager

http://www.sub-soft.com/download/moxa moxa-windows-driver-manager-for-windows-v3.1.exe

Open Driver Manager software.

Click Search

Find IP address of device you are moving to new computer. If you are moving multiple devices, start with lowest IP address and work your way up. Document the IP settings and COM port settings from your old system so that you can assign the same COM Port number to the same IP address as on the old system.

| 🔹 NPort Windows Driver Manager | | | | | |
|--|------------------------------------|---|-----------|--|--|
| Eile COM Mapping Configuration View Help | | | | | |
| Exit | Exit Add Remove Apply Undo Setting | | | | |
| No | COM Port 🛛 🛆 | Address 1 | Address 2 | | |
| 1 3 4 | COM1 COM2 COM4 COM14 | 192.168.2.246 950:966 (Port1) 192.168.2.41 950:966 (Port1) 192.168.2.43 950:966 (Port1) 192.168.2.42 950:966 (Port1) | | | |
| Total COI | M Port - 4 | | | | |