




Step 1: Cut & strip wire

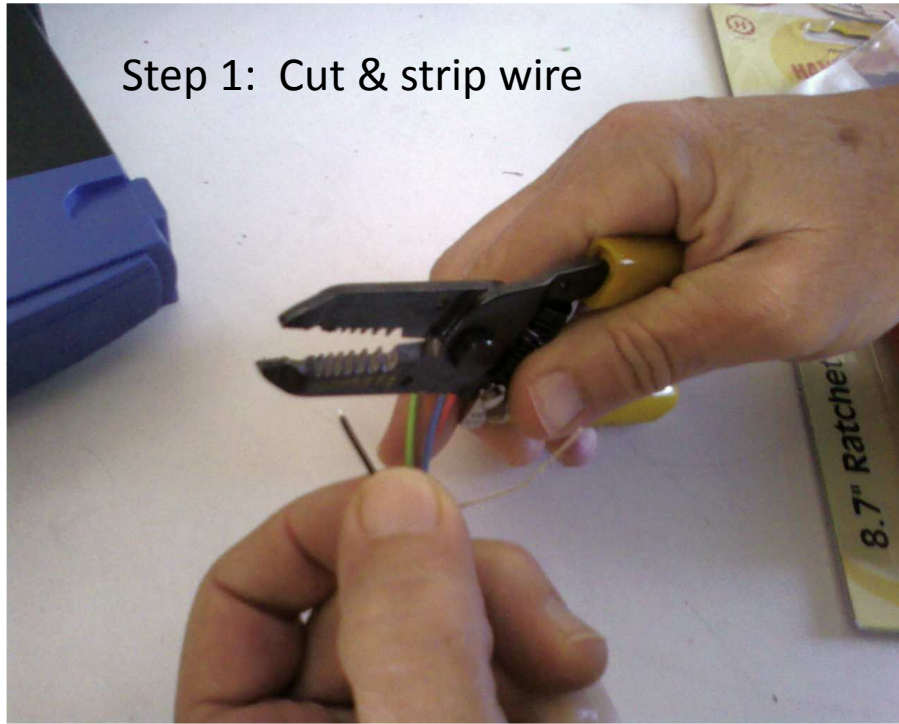

Step 2: Put pin inside crimp tool, squeeze Partially, not completely

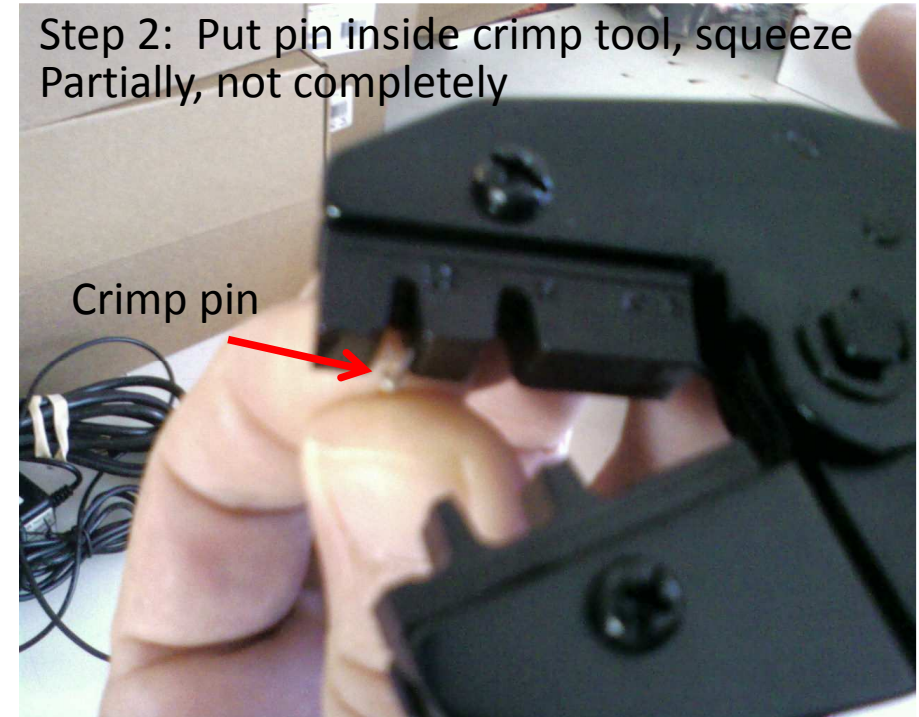

Step 3: Put stripped wire inside crimp Pin and finish squeeze.

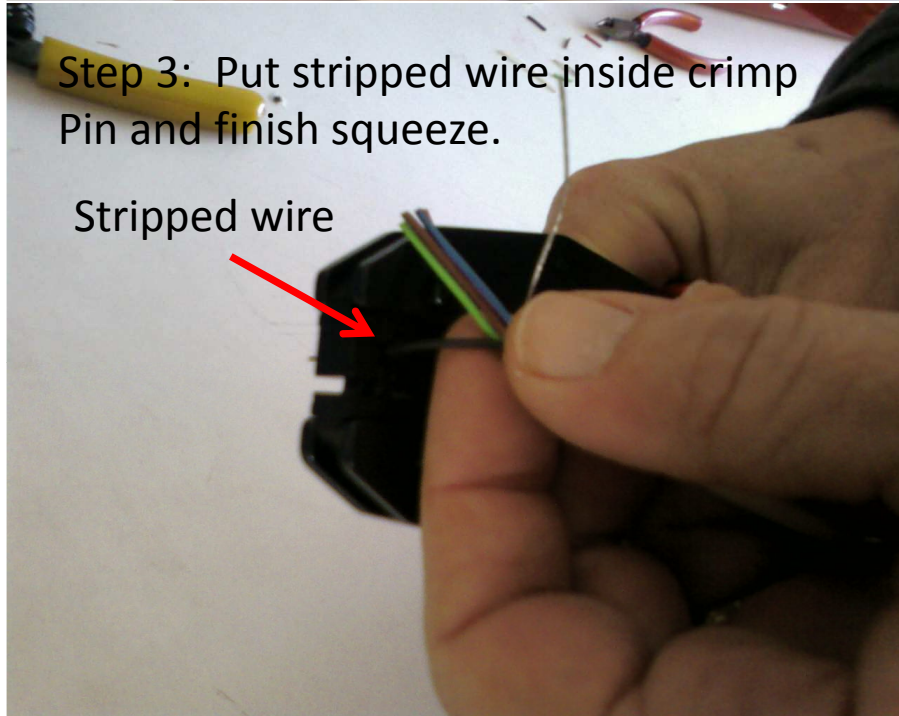

Step 3: Put stripped wire inside crimp Pin and finish squeeze. Another angle view

